

MANUAL DE USUARIO



SECADOR • **DE PELO**


SY • SC17

WELCOME

Thank you for purchasing the professional hair dryer SY-SC17. In order to fully benefit from this product, please read the safety and operation instructions carefully. Store the user manual in a safe place for future reference.

You may already be familiar with using a hairdryer but please do take the time to read these instructions. They are designed to familiarize you with the unit's features and to ensure you get the very best out of your purchase.

PARTS OF THE SY-SC17

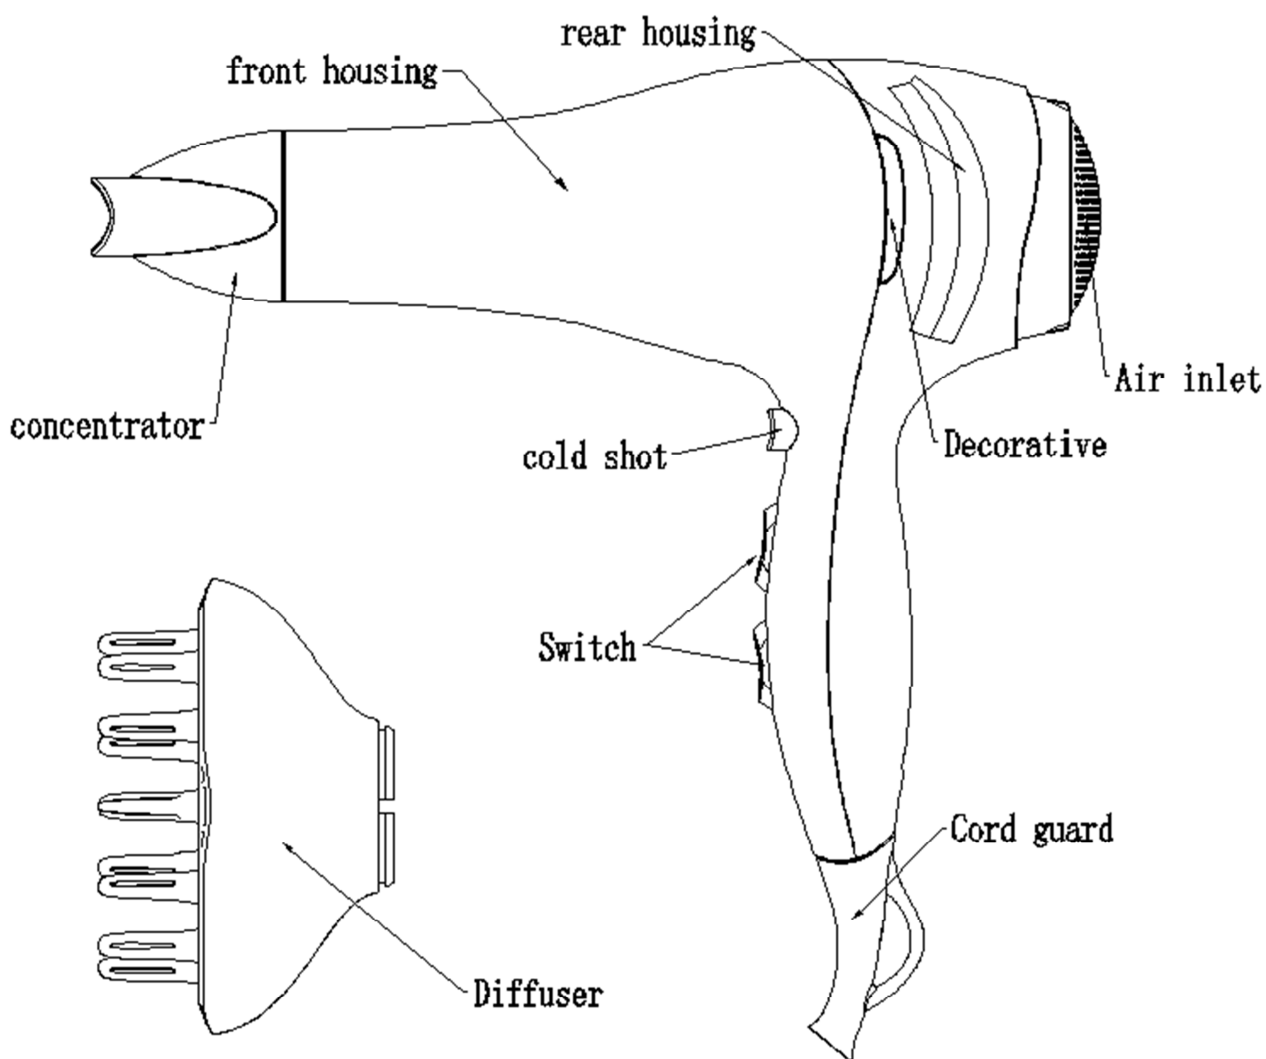

SAFETY PRECAUTIONS

WARNING



Keep this appliance away from water. Do not use this appliance near water and bathtubs, showers, basins or other vessels containing water.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, please read the following safety instructions carefully:

DANGER

As with most electrical appliances, electrical parts retain static electricity even though the switch is off:
To reduce the risk of death by electrical shock:

1. Always “unplug it” immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not immerse the hairdryer in water or any other liquid.
5. However, if the appliance happens to fall in water or any other liquids, unplug it immediately and leave the hairdryer in its position. Do not try to take it out of the water or liquid as it could cause serious injuries.

FOR YOUR SAFETY

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
4. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
5. This appliance should never be left unattended when plugged in.
6. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
7. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
8. If the supply cord is damaged, contact Sytech Service Center
9. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped into water. Contact Sytech Service Center.
10. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
11. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and anything similar.
12. Never use while sleeping.
13. Never drop or insert any object into any opening or hose.
14. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
15. Do not use an extension cord with this appliance.
16. Do not direct hot air toward eyes or other heat sensitive areas.
17. Attachments may be hot during use. Allow them to cool before handling.
18. Do not place the appliance on any surface while it is operating.
19. While using the appliance, keep your hair away from the air inlets.
20. If the appliance switches off during use, it means that the overheating protective device has been activated. The appliance will switch on again once the unit has cooled down a little – this usually takes a short while.

ASSEMBLY

- 1) Clip the concentrator onto the front of the hairdryer (if required).
- 2) Switch on the unit by connecting the plug to the wall outlet and setting the on-off/speed switch to the desired level.
- 3) When you have finished using the hairdryer, set the on-off switch to the “0” position.
- 4) Store the hairdryer in a safe place away from humidity.

USING THE HAIRDRYER

1. Always ensure the switch is set to OFF position before plugging the unit into the power outlet.
2. Use the high setting for drying hair, and use low setting for styling.
3. If the hair dryer stops for any reason turn it off at once and let it cool down.
4. Switch control
0=OFF Position 1=LOW: low warm temperature.
1=Low: low speed 2=MIDDLE: middle hot temperature
2=HIGH: high speed 3=HIGH: high hot temperature
5. The concentrator & diffuser can be used on or without.
6. Switch off when finish using, and then remove the plug from the socket.

7. Cool shot: press the cold function button when operating as instructed above and cold air will begin to come out of the hairdryer.

Styling guide - Hair drying basics

1. Shampoo and condition your hair. Rinse the hair thoroughly. Put a towel around your hair to remove any excess moisture. Divide your hair into sections and then, using the dryer along with a styling brush, direct the hot air to each section of hair at a time. Move the dryer steadily across each section so that the hot air passes through the hair. Always direct the air towards the hair and not directly at the scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while using the dryer.
3. To avoid over-drying, do not concentrate heat on any one section for a long period of time. Keep the dryer moving continuously as you style your hair.
4. For quick styling, dampen the hair with some water before styling.
5. When using the dryer to create curls and waves, dry the hair till it is almost completely dry on the warmest setting (position 3), then finish styling the hair using the lower setting (position 1). This will set the desired style in your hair.
6. This dryer includes a concentrator attachment. Use the concentrator when you need to focus the drying power on small areas (such as a curl or a wave) or when you want to soften the curls.

MAINTENANCE

Important: Before you do any of the following, make sure the hairdryer is unplugged from the mains supply.

CLEANING

- Clean your appliance with a soft, damp (not wet) cloth.
- Do not use liquid or aerosol cleaners.
- Never immerse the unit in water or any other liquid.

TROUBLESHOOT

Make sure it is plugged into the main supply and switch on.

Make sure the ON/OFF button is on.

Check the fuse in the plug (see Electrical Information).

If the hairdryer still does not work properly, refer to your authorized service agent.

SPECIFICATIONS

Design hair dryer

6 selectable temperature settings

2 speed settings

2 positions for temperature control

"Cool Shot" function

Air inlet grille

Diffuser which helps to gain more hair volume,

Creates curls and perm hair

Rubber finish

Power: 2200W.

Voltage: 220-240V ~ 50/60Hz.

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.
Address: Pol. Ind. La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Hair Dryer
Sytech® SY-SC17 complies with the following directives:

CE standard: Directive 2004/108/EC

Low Voltage standards : Directive 2006/95/EC

ROHS standard: Directive 2002/95/EC Restriction of Hazardous Substance

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator

